

P136 SERIES MULTI MEDIA HOUSING

Fig.1


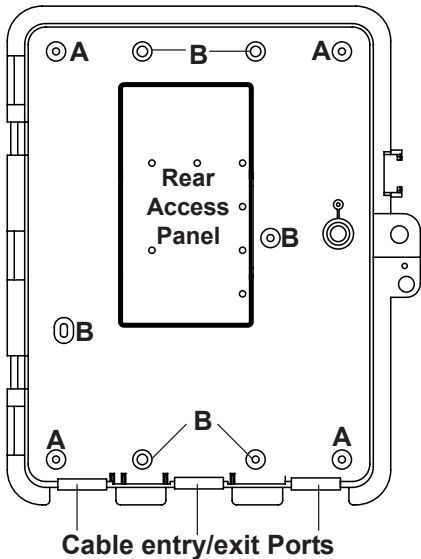


Fig.2

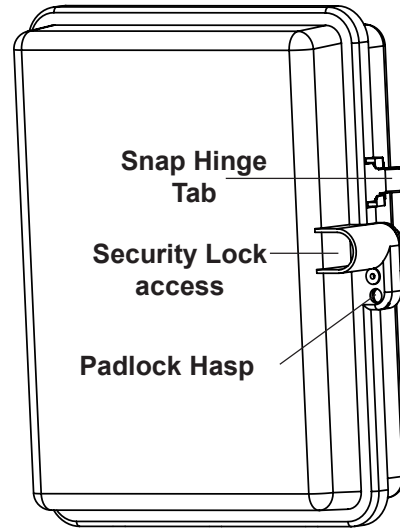

A- Main Base Mounting Feet.
B- Optional Base Mounting Feet.

INSTALLATION

1. Use box as template by drilling 1/4" holes through the 4 mounting feet. **Fig.1** Hold box up to wall and mark location through feet, for pilot holes.
2. Remove box and drill 4 mounting holes appropriate to the mounting surface, *as per recommendations of your CATV company and in compliance to local building and electrical codes.*
3. **If rear access is needed, pre-wire knockout (Fig.1) can be removed:**
 - a. To gain access to knock out area. **Fig.1**, open lid by pushing down on snap hinge tab; with tab still depressed, pull up to release lid. **Fig.2**
 - b. Place the ported end of the box on a stable, nonslip surface and firmly hold the top so that it sits at an angle of approximately 90°.
 - c. Using a utility knife, carefully cut along the serrated, vertical groove. Turn box 90° and cut along the 'cut to remove' line. Push partially cut panel through to remove completely.
4. After mounting holes are drilled as per your company's recommendation, align box over mounting holes and secure to wall. Close lid.
*Do not over fasten the screws. This will distort the shape of the box.

*For additional information contact your local CATV service provider.

P136 SERIES MULTI MEDIA HOUSING

Fig.1


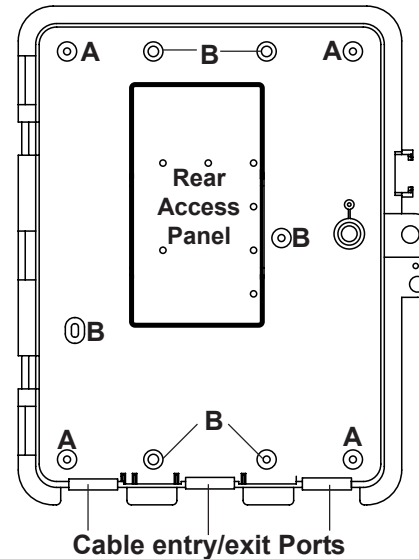


Fig.2

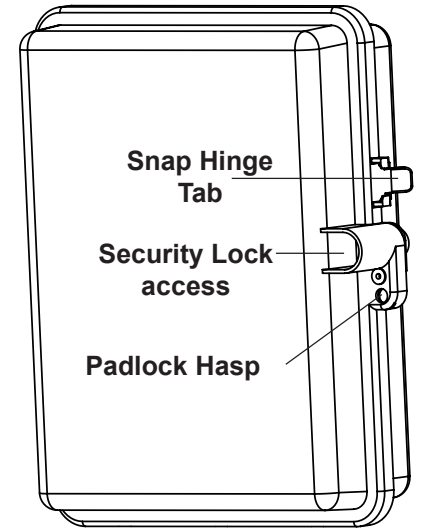

A- Main Base Mounting Feet.
B- Optional Base Mounting Feet.

INSTALLATION

1. Use box as template by drilling 1/4" holes through the 4 mounting feet. **Fig.1** Hold box up to wall and mark location through feet, for pilot holes.
2. Remove box and drill 4 mounting holes appropriate to the mounting surface, *as per recommendations of your CATV company and in compliance to local building and electrical codes.*
3. **If rear access is needed, pre-wire knockout (Fig.1) can be removed:**
 - a. To gain access to knock out area. **Fig.1**, open lid by pushing down on snap hinge tab; with tab still depressed, pull up to release lid. **Fig.2**
 - b. Place the ported end of the box on a stable, nonslip surface and firmly hold the top so that it sits at an angle of approximately 90°.
 - c. Using a utility knife, carefully cut along the serrated, vertical groove. Turn box 90° and cut along the 'cut to remove' line. Push partially cut panel through to remove completely.
4. After mounting holes are drilled as per your company's recommendation, align box over mounting holes and secure to wall. Close lid.
*Do not over fasten the screws. This will distort the shape of the box.

*For additional information contact your local CATV service provider.